




Dell Inspiron 14z-5423 RAM Replacement

This step-by-step guide will teach users how to remove and replace the RAM memory for the Dell Inspiron 14z-5423.

Written By: Brittany

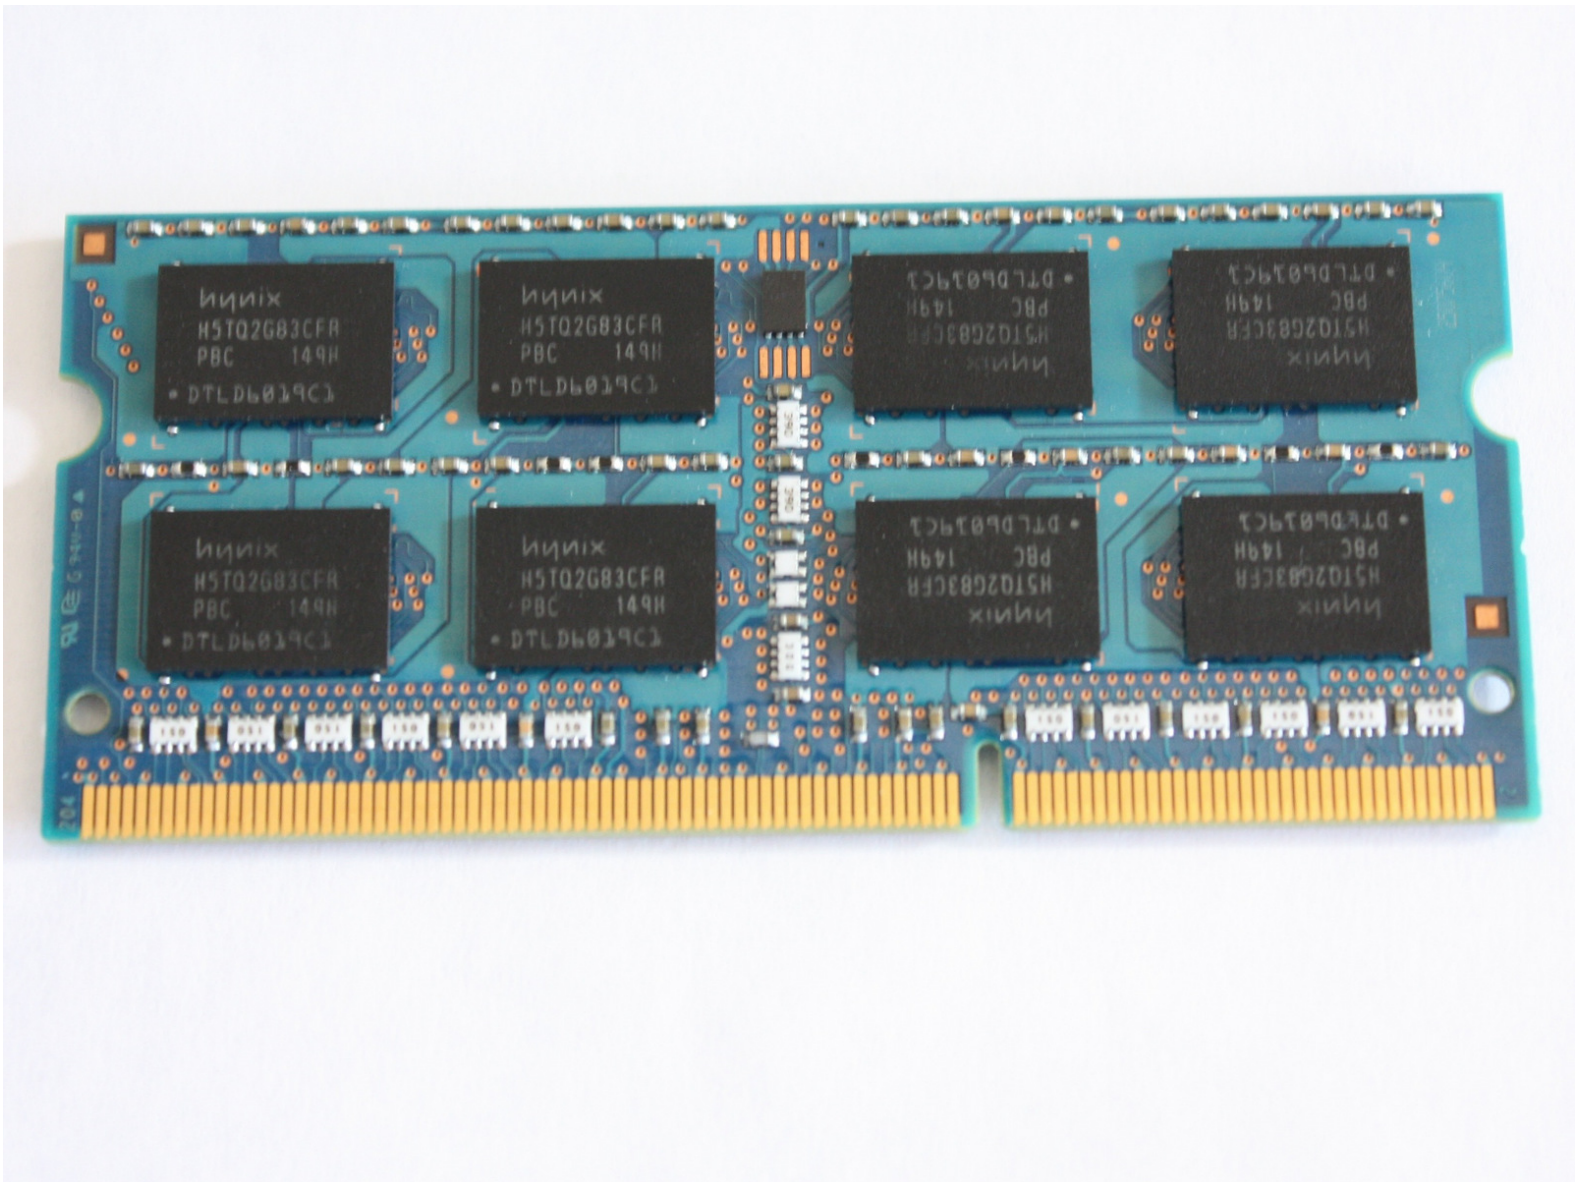

INTRODUCTION

The RAM is a memory card that holds the operating system and applications in order for the computer to access data.



TOOLS:

- [JIS Driver Set](#) (1)
-

Step 1 — RAM



- Close the display and turn over the computer.


⚠ Make sure your device is powered down and unplugged before beginning the replacement.

Step 2




- Use a J0 bit tipped screwdriver to unscrew the one 6 mm Phillips screw on the RAM cover.

Step 3

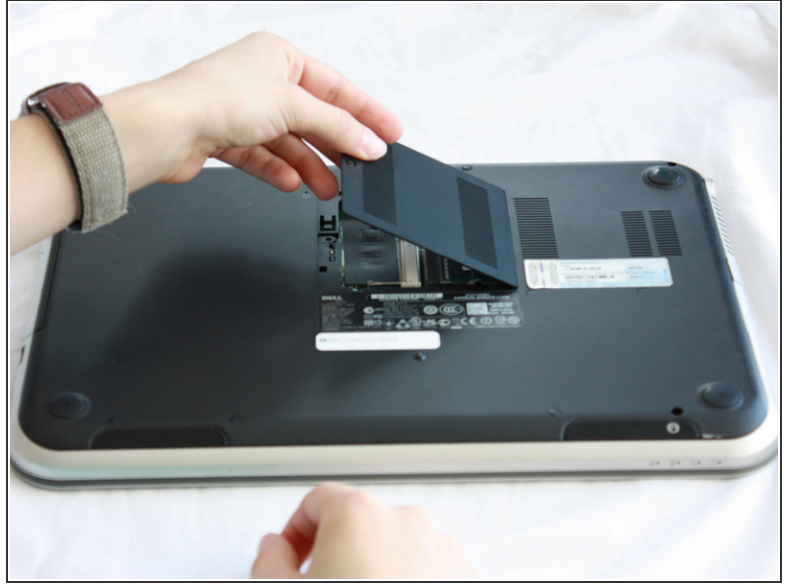

- Lightly lift the RAM cover up and at an angle, away from the computer.

Step 4

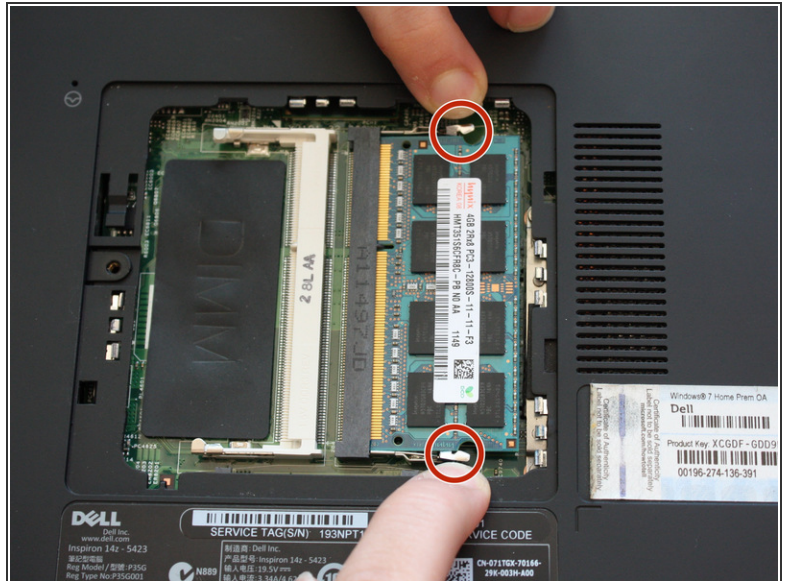

- Use your fingers to carefully pull the securing clips on the RAM away from each other.

i The RAM should pop up when the clips are released.

Step 5



- Remove the popped up RAM by pulling it away from the connection.

i If it does not pop up pry it out in a steady and straight direction.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 12:26:46 AM.